

# Lube Level Maintainer – Model LM500/LM500-TF



#### Features

- Test Feature (TF) allows test of float and switch
- Direct Mount (DM) capable
- · Eliminates under/overfill due to "human error"
- · See oil level and condition without shutting down
- Simple installation
- Automatically maintains lube level
- Low level, 3-wire, snap-action switch
- Positive sealing Thumb-Valve<sup>™</sup>

### Not intended for use with fuel

The Murphy LM500-TF Oil Level Maintainer includes a test feature that confirms both the float and switch are operating correctly with a single press of the test button. The LM500 series maintains the crankcase oil level of an engine, pump or compressor. Adjusted to the correct running-oil-level, it will replenish oil as it is used. The low-level switch will alarm and/or shutdown the equipment if supply oil is lost and the equipment continues to use oil.

# Application

The LM500 maintains oil level on any size engine. It also supports installations that require a 3-wire, snap-action switch. Refer to LM500 Series Flow Rate Chart for application data.

# **Test Feature**

The form C (3-wire) contact allows a controller/annunciator to be wired as a closed-loop system, resulting in a reliable fault-sensitive circuit.


# How the LM500 Maintains Levels

As crankcase oil level drops, the LM500 float also drops and opens the Thumb-Valve<sup>™</sup>. This allows oil to flow from the supply tank, through the LM500, and into the crankcase. When proper level is achieved in the crankcase, the LM500 float rises, causing the Thumb-Valve<sup>™</sup> to close off further oil flow.

The simple and unique Thumb-Valve<sup>™</sup> is non-clogging and provides a positive, leak-free seal.

# **Thumb-Valve Operation**

If the clean oil supply is depleted and oil level continues to fall, the low level switch will operate an alarm or equipment shutdown.

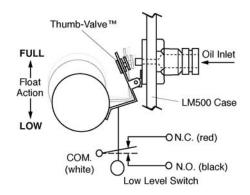

# **Specifications**

Crankcase Balance Vent Connection: 1/2 NPTF (top). Inlet Connection: 1/2 NPTF removable screen (side).

- Outlet Connection: 2 x 3/4 NPTF (side)
  - 1 x 3/4 NPTF (bottom)

Thumb-Valve<sup>™</sup> Material: Viton.

**Snap-switch:** SPDT rating 10 A, 125 VAC; 0.5 A, 125 VDC; 10 A, 30 VDC.

Wire leads: 18 AWG x 14 in.  $\pm$  2 in. (355 mm) length.

**Conduit Connection:** 1/2 inch conduit (female, top).

Case: Die cast aluminum

Lens: Clear "Frog Eye" non-staining, high impact, high temperature polycarbonate; UV and heat stabilized. **Dial:** High visibility white background with solid green band for normal level indication.

Maximum Inlet Pressure: 9.50 psi/25 ft. oil (head pressure).

Maximum Case Pressure: 15 psi (103 kPa).

**Maximum Differential:** 2 in. (51 mm) between running and stopped.

Maximum Ambient Temperature: 250°F (121°C).

Float: 304 Stainless Steel

**Flow Rates**: Refer to LM500 Series Flow Rates chart for application data.

**Dimensions:** Overall 6-9/16 inch tall x 6-3/16 inch deep x 3-1/2 deep. For exact dimensions, refer to document "00-02-0729 LM500 Installation Instructions".


**LM500/LM500-TF Shipping Dimensions:** 9.5 x 7.5 x 11 in. (241.3 x 190 x 279.4 mm).

LM500/LM500-TF Shipping Weight: 3 lbs. 13.44 oz (1.74 kg)


In order to consistently bring you the highest quality, full featured products, we reserve the right to change our specifications and designs at any time. MURPHY products and the Murphy logo are registered and/or common law trademarks of Murphy Industries, LLC. This document, including textual matter and illustrations, is copyright protected by Murphy Industries, LLC, with all rights reserved. (c) 2011 Murphy Industries, LLC.


### LM500 Series Flow Rates

LM500 Series Flow Rates are based on SAE 40 motor oil @ 2 ft. head pressure. Friction losses due to piping are not considered.

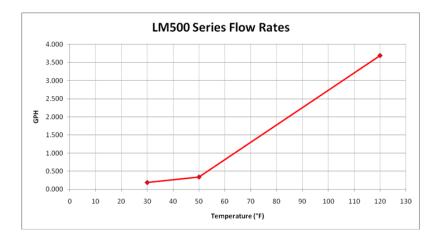


# **Typical Installations**

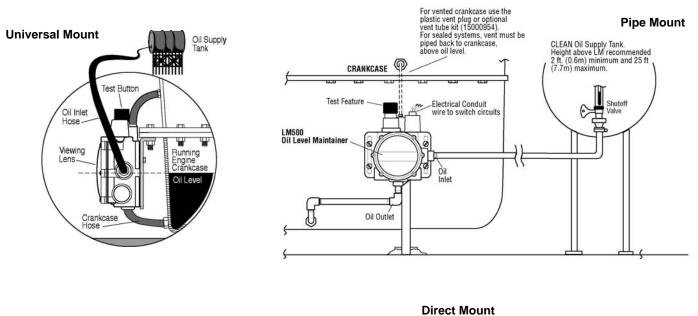

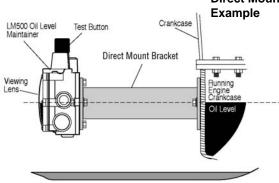

### How to Order

To order the LM500 use the model number designation diagram below. (Example for Pipe Mount: LM500-TF-PM)

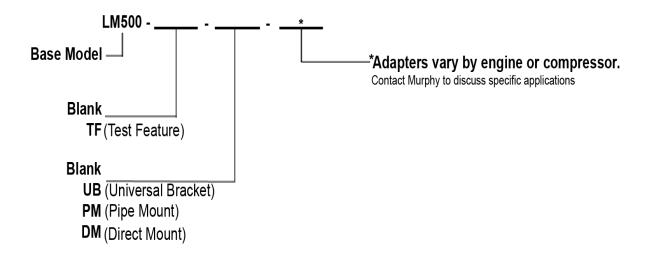

### **Mounting Brackets with Hardware**

In addition to the direct mounting option, Murphy offers two mounting brackets for the LM500. The Pipe Bracket Kit fits a 7/8 in. (22 mm) diameter pipe (see typical installation below). The Universal Flange Kit allows various mounting methods. For exact dimensions, refer to document "00-02-0729 LM500 Installation Instructions".

### Accessories (Specify part number)

Part Number
15000954
15000355
89080801
89081001
15000518
15000519 15000532

### Vent Fitting Kit: 15000954

One Tubing vent One 1/4 x 1/2 NPT Connector

#### Hose Kit: 15000355

One 1/2 in. (13 mm) I.D. x 3 ft. (914 mm) long hose
One 1 in. (25 mm) I.D. x 3 ft. (914 mm) long hose
Two 1/2 in. (13 mm) worm gear clamp
Two 1 in. (25 mm) worm gear clamp
Two 1/2 NPT x 1/2 in. (13 mm) barbed fitting
Two 3/4 NPT x 1 in. (25 mm) barbed fitting

#### Fittings Kit: 15000943

One Tubing vent One Hose Barb, 1/2 NPT to 1/2 Hose One Hose Barb, 1" ID HOSE x 3/4 NPT One Connector, 1/4 x 1/2 NPT THIS PAGE INTENTIONALLY LEFT BLANK.

#### FW MURPHY

P.O. Box 470248 Tulsa, Oklahoma 74147 USA Phone: +1 918 317 4100 Fax: +1 918 317 4266 E-mail: sales@fwmurphy.com

INDUSTRIAL PANEL DIVISION Fax: +1 918 317 4124 E-mail: ipdsales@fwmurphy.com

#### MURPHY POWER IGNITION Web site: www.murphy-pi.com

#### CONTROL SYSTEMS & SERVICES DIVISION P.O. Box 1819

Rosenberg, Texas 77471 USA Phone: +1 281 633 4500 Fax: +1 281 633 4588 E-mail: css-solutions@fwmurphy.com

#### FRANK W. MURPHY LTD.

Church Road, Laverstock Salisbury, SP1 1QZ, UK Phone: +44 1722 410055 Fax: +44 1722 410088 E-mail: sales@fwmurphy.co.uk Web site: www.fwmurphy.co.uk

FW MURPHY INSTRUMENTS (HANGZHOU) CO., LTD. 77 23rd Street

Hangzhou Economic & Technological Development Area Hangzhou, Zhejiang, 310018, China Phone: +86 571 8788 6060 Fax: +86 571 8684 8878 E-mail: apsales@fwmurphy.com



#### COMPUTRONIC CONTROLS

41 - 46 Railway Terrace Nechells, Birmingham, B7 5NG, UK E-mail: sales@computroniccontrols.com Web site: www.computroniccontrols.com



www.fwmurphy.com

**Warranty** - A limited warranty on materials and workmanship is given with this FW Murphy product. A copy of the warranty may be viewed or printed by going to http://www.fwmurphy.com/warranty